

(To be inserted in the "Specifications" for
the Model 1 Incinerator)

ILLEGIB

Parts

The following spare parts shall be packaged with each incinerator:

<u>Drawing No.</u>	<u>Description</u>	<u>Quantity</u>
354-110	V ¹ head assembly	1
354-111	Backet assembly	1
354-217	Clamp band assembly	2
354-309	Wedge	4
354-347	Door gasket	2
354-348	Door gasket	2
354-350	Outer pin	8
354-357	Screw	24
354-386	Flange gasket	45 feet
354-397	Cap screw	24
354-398	Slit plate	2
354-399	Gasket	4
354-403	Pin	24
354-404	Lock washer	24
354-434	Flexible duct	1
354-436	Dust flange gasket	1
354-447	Pin	24
354-448	Lock washer	24

008632
057447

DOC	6	REV DATE	2 JULY 80	REV	30
ORIG COMP	OSB	ORI	56	REV	30
ORIG CLASS	M	PAGES	2	REV	U
JUST		NEXT REV		AUTHI	HR 10-4

In addition, one 3-ohm 50w or No. 1 Resistor Form-A-1000, or its equivalent, shall be provided for use in connecting the Door Control (Drawing Nos. 354-347 and 354-348) to the Door Assembly as indicated in Drawing No. 354-113.

Also, one spare thermocouple assembly shall be provided (as described in the list of changes and additions dated March 1, 1960).