


01X - 6 114 13001 - 6

	6	5	4	3	2	1
32	/	⊙	⊙	⊙	*	⊙
31	/	⊙	⊙	⊙	*	⊙
30	/	⊙	⊙	⊙	*	⊙
29	/	⊙	⊙	⊙	*	⊙
28	/	⊙	⊙	⊙	*	⊙
27	/	x	x	x	x	/
26	/	x	x	x	x	/
25	/	x	x	x	x	/
24	/	x	x	x	x	/
23	/	x	x	x	x	/
22	/	x	x	x	x	/
21	/	x	x	x	x	/
20	/	x	x	x	x	/
19	/	x	x	x	x	/
18	/	x	x	x	x	/
17	/	x	x	x	x	/
16	/	x	x	x	x	/
15	/	x	x	x	x	/
14	/	x	x	x	x	/
13	/	x	x	x	x	/
12	/	x	x	x	x	/
11	/	x	x	x	x	/
10	/	x	x	x	x	/
9	/	x	x	x	x	/
8	/	x	x	x	x	/
7	/	x	x	x	x	/
6	/	x	x	x	x	/
5	/	x	x	x	x	/
4	/	x	x	x	x	/
3	/	x	x	x	x	/
2	/	x	x	x	x	/
1	/	⊙	⊙	⊙	⊙	⊙

⊙ Always lighted  
 \* Intermittent  
 / Unlit

Row 6 Y used for Attitude data  
 after SPARS installed

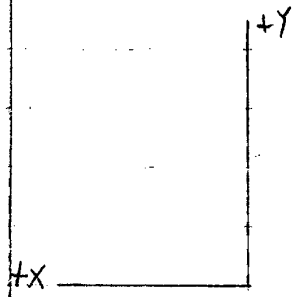

9 unlit

11 VSPC#1

6 Serial #